Jameco Part number 132610

EPIC 40/28 Pin ZIF Adapter

Copyright (C) 1997 microEngineering Labs, Inc.

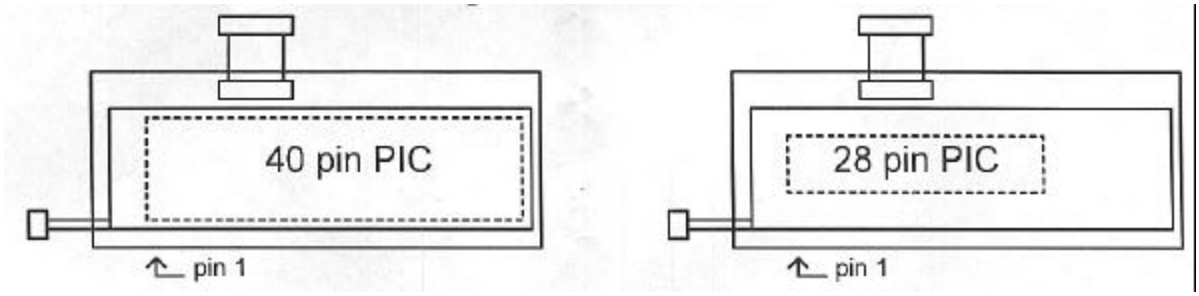

USE:

Plug the 40/28 Pin ZIF Adapter into the 10 pin header near the bottom of the EPIC Programmer. Make sure the EPIC Programmer is powered up and the EPIC software is running before inserting a PIC into the 40/28 Pin ZIF Adapter.

To insert a PIC into the adapter, lift the lever on the socket. Position the 40 or 28 pin PIC with pin one all the way toward the lever end of the socket and push down the lever to lock the PIC in place. 18 pin PICs must be programmed in the 18 pin socket on the EPIC Programmer and not in the ZIF adapter.